





COCKPIT TRACING WORKSHEET


1. Obtain a piece of workable material such as newspaper, wrapping paper, craft paper or clear plastic sheeting, enough to cover the entire cockpit opening. Make it large enough to be taped down to ensure the material will not move during the tracing process.

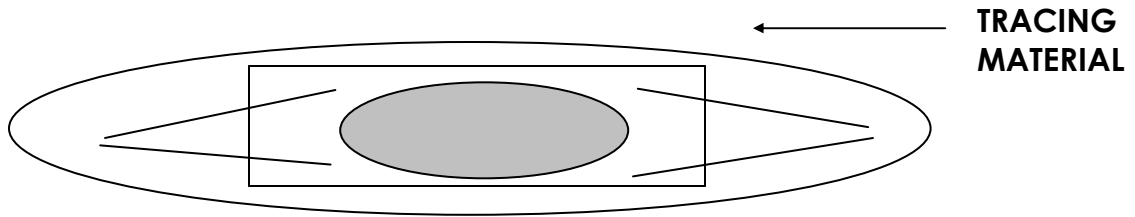


2. Use a marking pen and trace the entire **OUTER EDGE** of the cockpit rim.

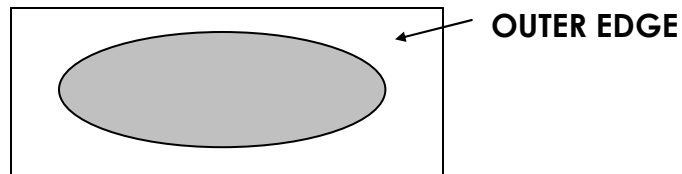

3. Please be sure to indicate the direction of the **BOW** on your tracing.

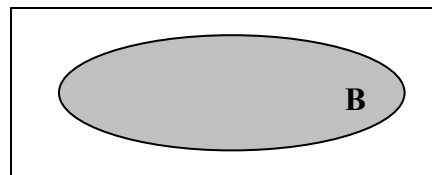

4. After tracing the cockpit rim, remove your tracing material and measure the distance between the **AFT OUTSIDE EDGE** of the cockpit rim forward to the paddler's back when paddler is seated in the kayak. Mark this on your pattern as shown below.

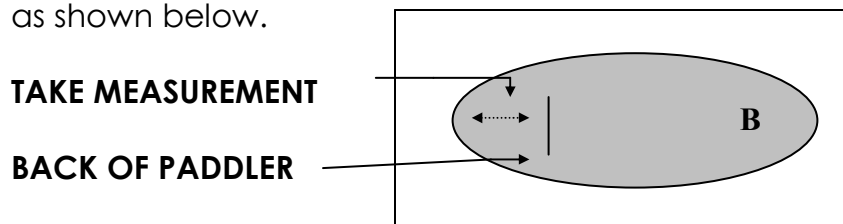

5. If the seat back rises above the plane of the cockpit rim, please record that on the tracing.
6. Please include on the tracing your name, your contact information, your paddlesport retailer's name, the name of the boat's manufacturer, model and the type of hull material (composite, polyethylene or other plastic).
7. Mail your tracing to: SEALS SPRAYSKIRTS PO BOX 957, 26 GRECCO DR. JOHNSTOWN, NY 12095

View our how to make a cockpit tracing video at www.sealsskirts.com/faq